


TD/50 Parts Breakdown

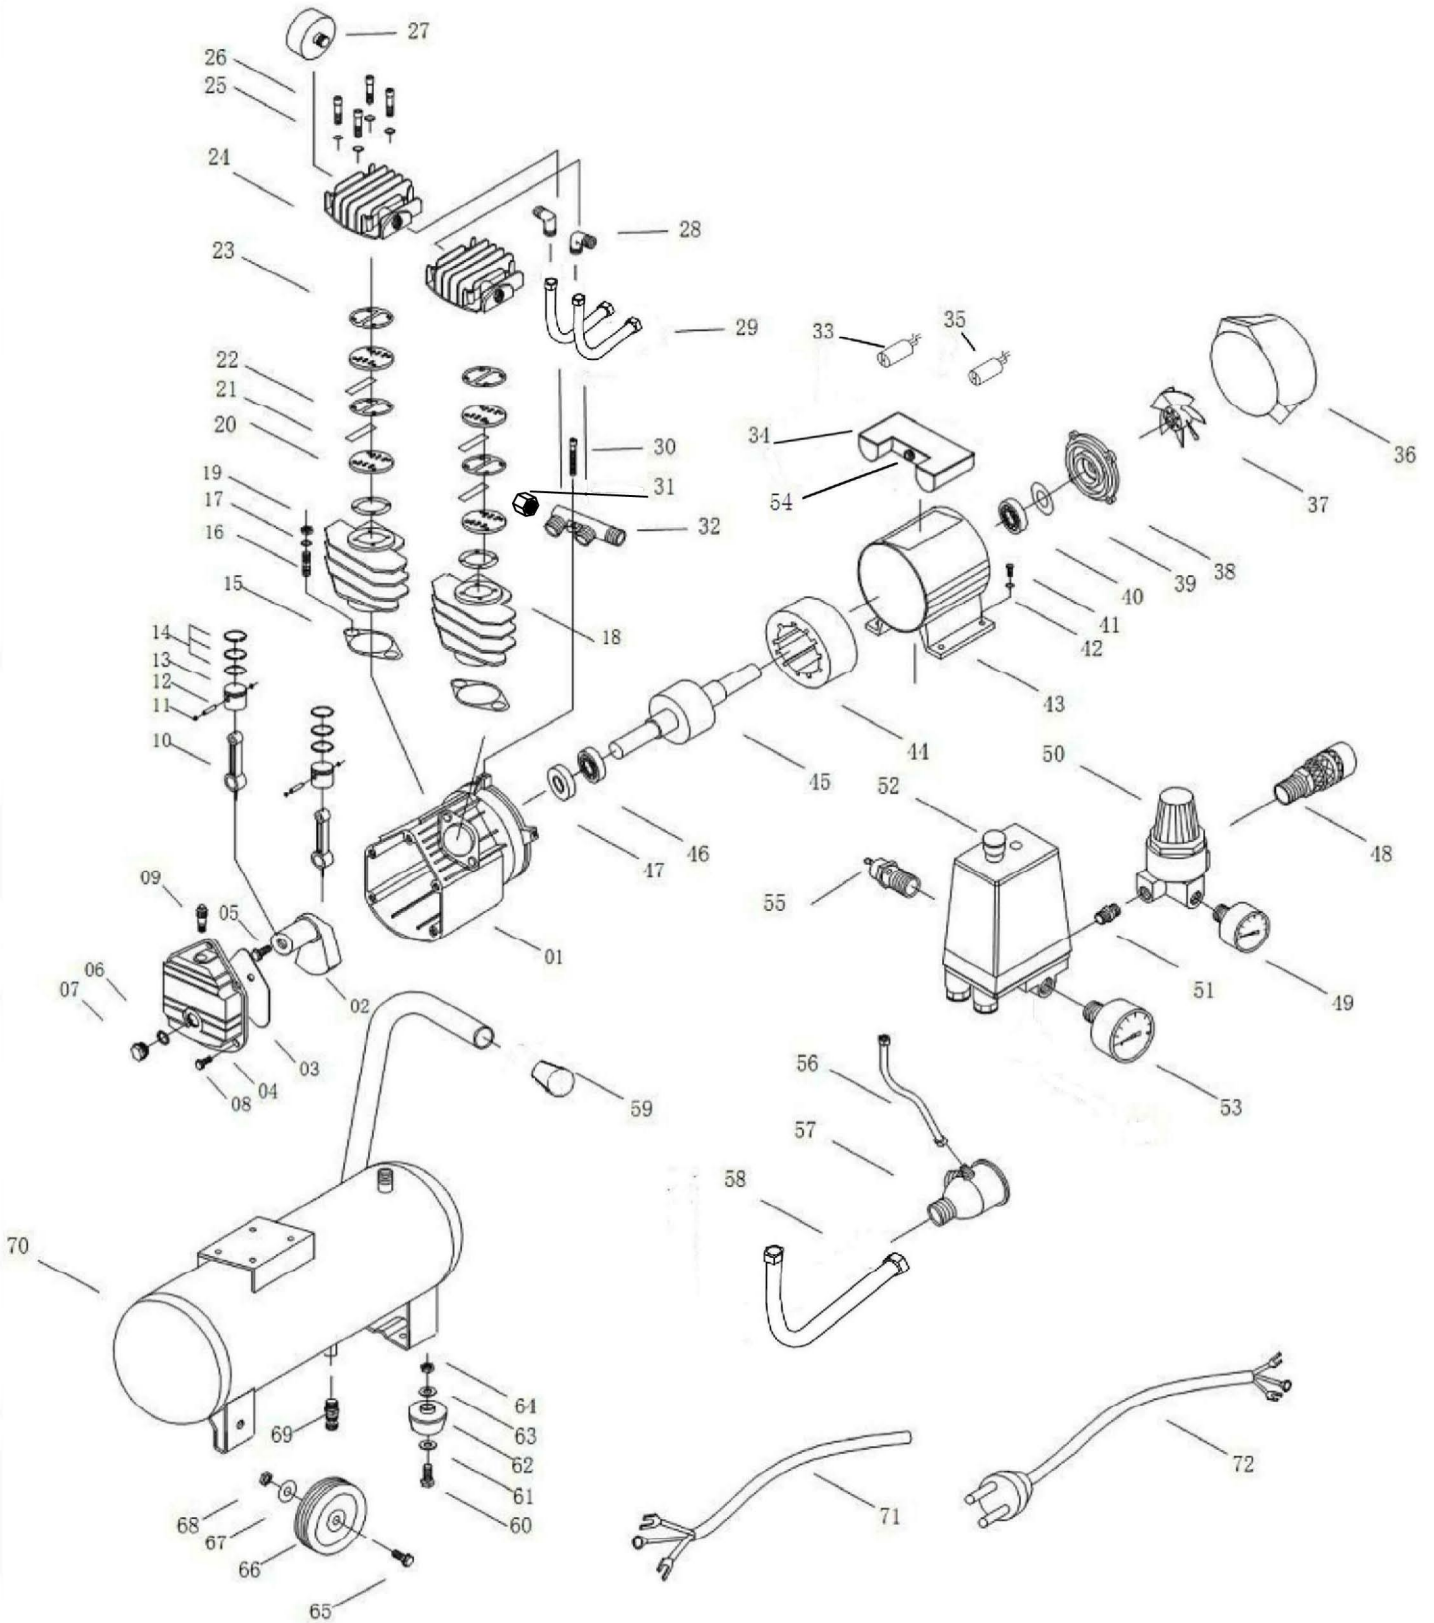

TD-50 Parts List

REF. #	PART #	DESCRIPTION
1	TD05001	CRANKCASE
2	TD05002	CRANKSHAFT
3	TD05003	FRONT COVER GASKET
4	TD05004	FRONT COVER
5	TD05005	HEX BOLT
6	TD05006	OIL SIGHTGLASS SEAL
7	TD05007	OIL SIGHTGLASS
8	TD05008	SCREW
9	TD05009	BREATHER
10	TD05010	CONNECTING ROD
11	TD05011	RETAINING RING
12	TD05012	PISTON PIN
13	TD05013	PISTON
14	TD05014	COMPRESSOR RING SET
15	TD05015	CYLINDER GASKET
16	TD05016	STUD BOLT
17	TD05017	SPRING WASHER
18	TD05018	CYLINDER
19	TD05019	NUT
20	TD05020	VALVE PLATE GASKET
21	TD05021	VALVE PLATE
22	TD05022	VALVE REED
23	TD05023	CYLINDER HEAD GASKET
24	TD05024	CYLINDER HEAD
25	TD05025	SPRING WASHER
26	TD05026	HEX BOLT
27	TD05027	AIR FILTER
28	TD05028	ELBOW
29	TD05029	EXHAUSTING PIPE
30	TD05030	HEX BOLT
31	TD05031	UNLOADER VALVE
32	TD05032	JOINT CONNECTOR
33	TD05033	STARTING CAPACITOR
34	TD05034	CAPACITOR HOUSING
35	TD05035	RUNNING CAPACITOR
36	TD05036	SHROUD
37	TD05037	FAN
38	TD05038	REAR MOTOR COVER
39	TD05039	GASKET
40	TD05040	BALL BEARING

REF. #	PART #	DESCRIPTION
41	TD05041	SCREW
42	TD05042	SPRING WASHER
43	TD05043	MOTOR SEAT
44	TD05044	STATOR
45	TD05045	ROTOR
46	TD05046	BALL BEARING
47	TD05047	OIL SEAL
48	TD05048	QUICK CONNECTOR
49	TD05049	PRESSURE GAUGE
50	TD05050	REGULATOR
51	TD05051	CONNECTOR
52	TD05052	PRESSURE SWITCH
53	TD05053	PRESSURE GAUGE
54	TD05054	OVERLOAD PROTECTOR
55	TD05055	SAFETY VALVE
56	TD05056	TUBE
57	TD05057	CHECK VALVE
58	TD05058	EXHAUSTING PIPE
59	TD05059	HANDLE PLUG
60	TD05060	BOLT
61	TD05061	FLAT WASHER
62	TD05062	FOOT
63	TD05063	FLAT WASHER
64	TD05064	NUT
65	TD05065	BOLT
66	TD05066	WHEEL
67	TD05067	FLAT WASHER
68	TD05068	HEX NUT
69	TD05069	DRAIN VALVE
70	TD05070	TANK
71	TD05071	MOTOR POWER CORD
72	TD05072	POWER CORD